



MICROPROCESSOR CONTROL (CPU)

AUTOMATIC VOLTAGE REGULATOR

WPD-2000VA, WPD-3000VA, WPD-5000VA



Instruction Manual

Please read user manual carefully before use.



1. FEATURES

- Microprocessor Control (CPU)
- Wall-Mounted AVR
- Display: input and output voltage digital display
- Wide range voltage regulation
- Zero cross switching
- Automatically executes protection .when protection finished , goes off
- High voltage protection: Yes
- Low voltage protection: Yes
- High temperature protection: Yes
- Overload protection: Yes
- Circuit protection: circuit breaker
- Smart cooling system: Yes

2. DESCRIPTION

FIG 1 Front Panel: 2000VA

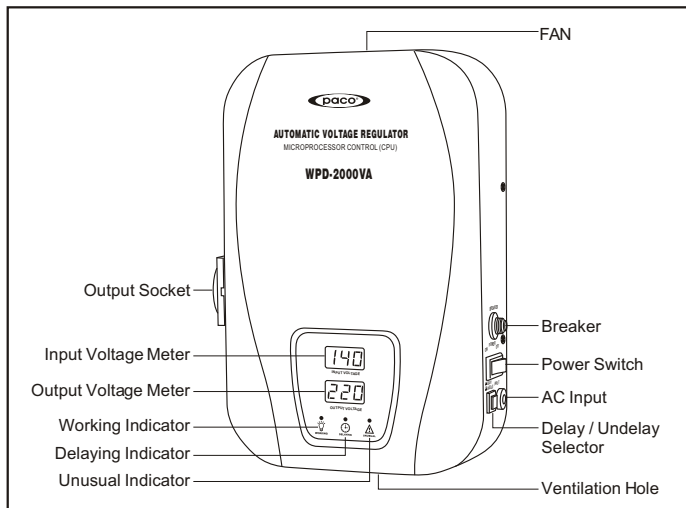


FIG 2 Front Panel: 3000VA-5000VA

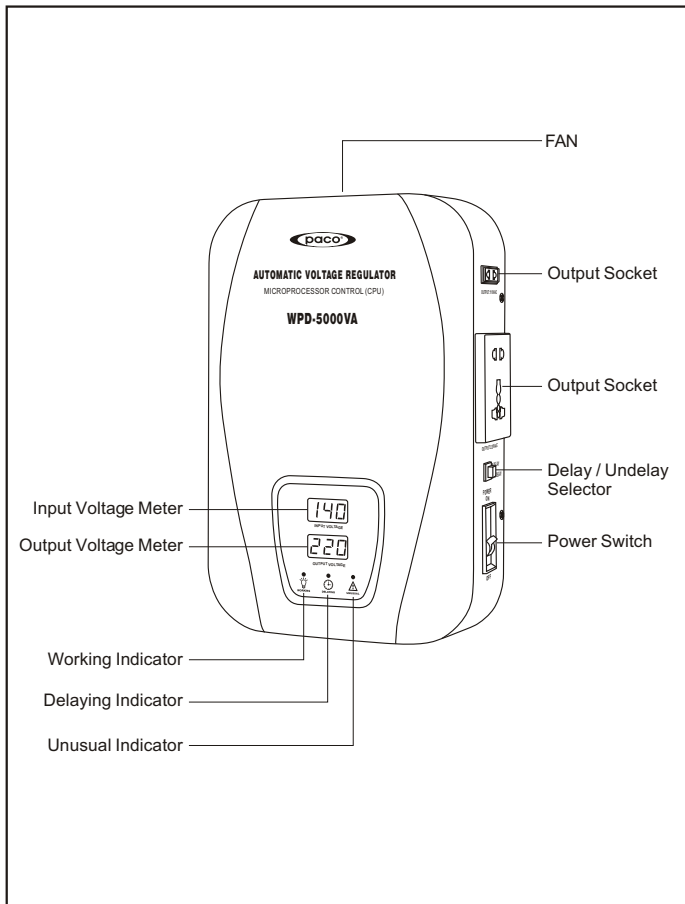


FIG 3 Top and bottom panels: 2000VA

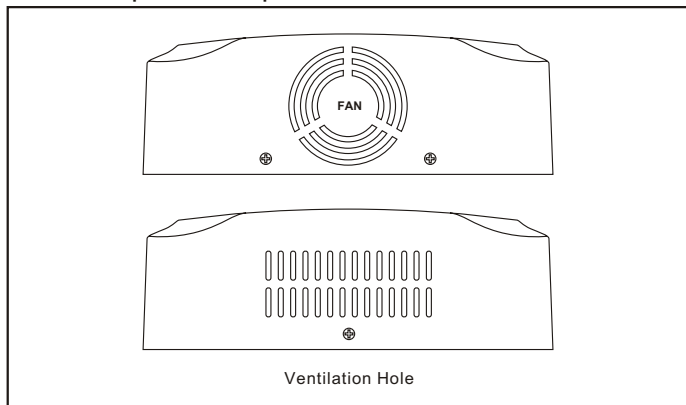


FIG 4 Top and bottom panels: 3000VA-5000VA

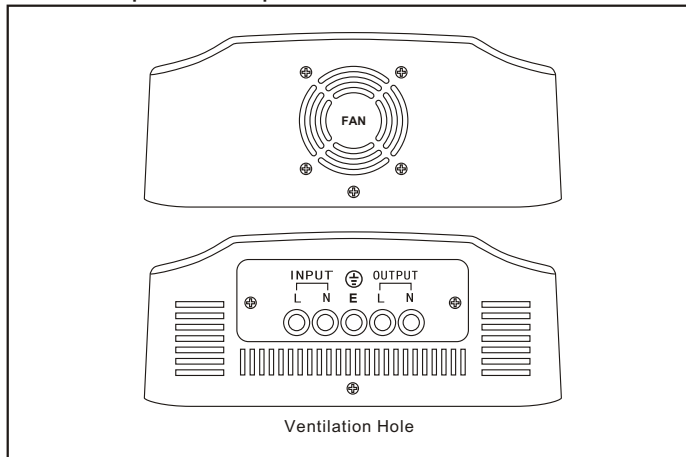


FIG 5 Rear Panel: 2000VA


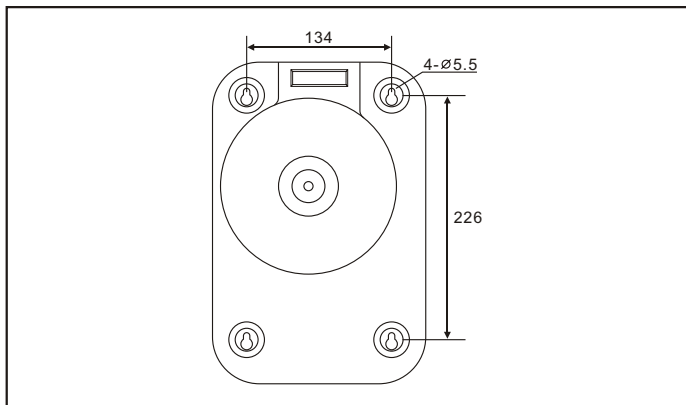


FIG 6 Rear Panel: 3000VA -5000VA



3. INDICATING SIGN

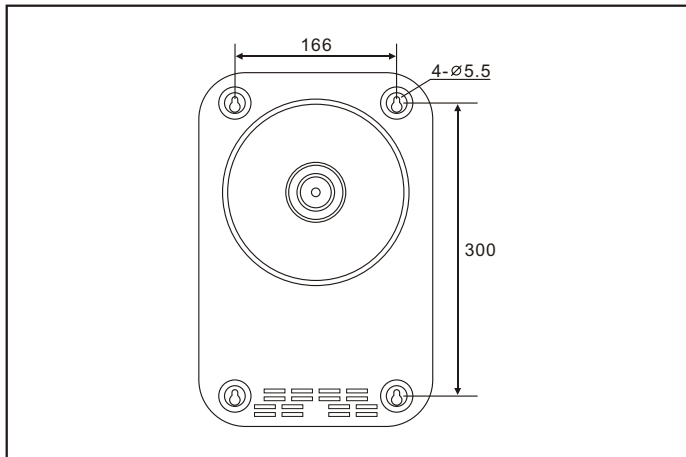

WORKING

WHEN THE GREEN INDICATOR IS LIGHTING.
THE REGULATOR IS WORKING.



DELAYING

WHEN ORANGE INDICATOR IS FLASHING EVERY ONE SECOND, THE SYSTEM IS TURNING INTO DELAYING STATE, AND THE REGULATOR HAS NO OUTPUT.
AFTER DELAY, ORANGE INDICATOR WILL EXTINGUISH AND THE REGULATOR RESUME OUTPUT.



UNUSUAL

WHEN THE RED INDICATOR IS FLASHING EVERY ONE SECOND, THE SYSTEM IS TURNING INTO INPUT LOW VOLTAGE PROTECTION AND INPUT HIGH VOLTAGE PROTECTION.

WHEN THE RED INDICATOR IS CONTINUOUSLY ILLUMINATING, THE SYSTEM IS TURNING INTO OUTPUT HIGH VOLTAGE PROTECTION.

WHEN AVR TEMPERATURE IS HIGHER THAN THE SET-POINT TEMPERATURE, THE UNIT WILL AUTOMATICALLY TURN INTO PROTECTION STATE, RED INDICATOR WILL FLASH EVERY ONE SECOND AND OUTPUT SHUT DOWN. WHILE TEMPERATURE IS LOWER THAN SET-POINT TEMPERATURE, LED LIGHT WILL EXTINGUISH, THE UNIT RECOVER TO WORK AUTOMATICALLY.

4. LED INDICATOR ILLUSTRATION

LED Indicator Illustration			
CONDITION	WORKING-G	DELAYING-Y	UNUSUAL-R
Power Off	—	—	—
Working	☐	—	—
Delay Output	☐	☆	—
Output high voltage protection	☐	—	☆
Output low voltage protection	☐	—	☆
Output high voltage protection	☐	—	☐
High temperature protection	☐	—	☆

NOTE:

☐ : CONTINUOUSLY ILLUMINATE

☆ : FLASH

— : EXTINGUISH

5. LED DIGITAL DISPLAY INDICATOR ILLUSTRATION

LED Digital Display Indicator Illustration		
CONDITION	INPUT DISPLAY INDICATOR	OUTPUT DISPLAY INDICATOR
Power Off	Extinguish	Extinguish
Working	Input Voltage	Output Voltage
Delay Output	Voltage at low-voltage protection (selective)	Countdown (selective)
Output high voltage protection	"HHH" (Flash)	"U-P"
Output low voltage protection	"LLL" (Flash)	"U-P"
High temperature protection	"FOH"	"F-P"
Overcurrent protection (CT Model)	"COH"	Delay Countdown


NOTE: Indication for overcurrent is not equipped in standard configuration. This function should be effective only after users notify manufacturer in advance.

6. OPERATION


- Before use, please make sure the voltage and power of the appliance are accord with the labeled power and specification of the unit to avoid any damage.
- Please connect the appliance before turning on the unit. Switch on appliance after you make sure the unit is working normally with output voltage.
- When connecting the electrical appliance with motor or compressor, such as drill, air-conditioner and so on to the automatic voltage regulator, please make sure that the power rating of the automatic voltage regulator is at least 3 times of the power rating of the electrical appliance, so that it can work smoothly, because the starting up power is much beyond of the power rating of the electrical appliance.

- Output Delay: Delaytime 6 seconds (DEFAULTED) and 180 seconds (MANUAL SWITCH) are alternative.

AVR CONNECT STATE (FIG 1: 2000VA)

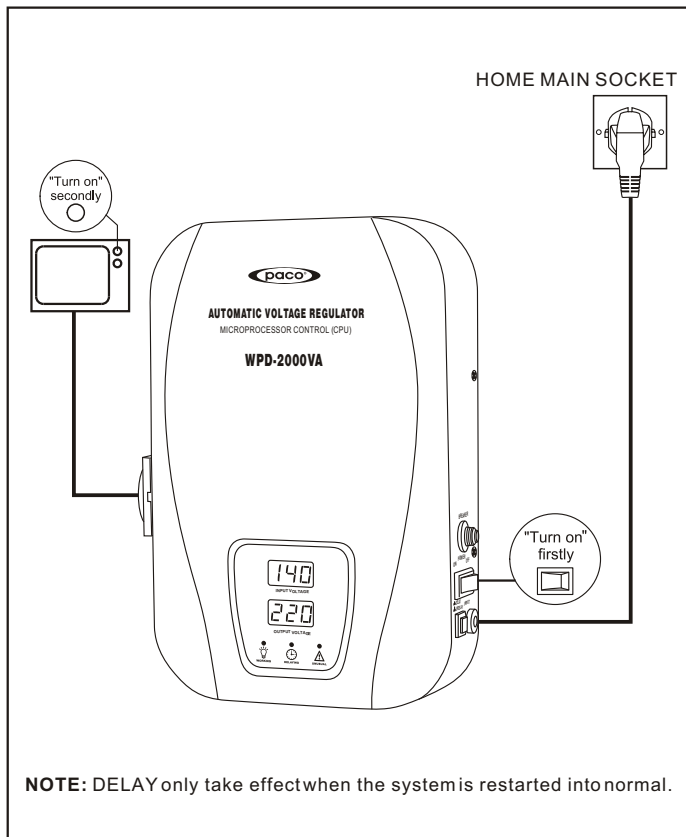

AVR CONNECT STATE (FIG 2: 3000VA-5000VA)

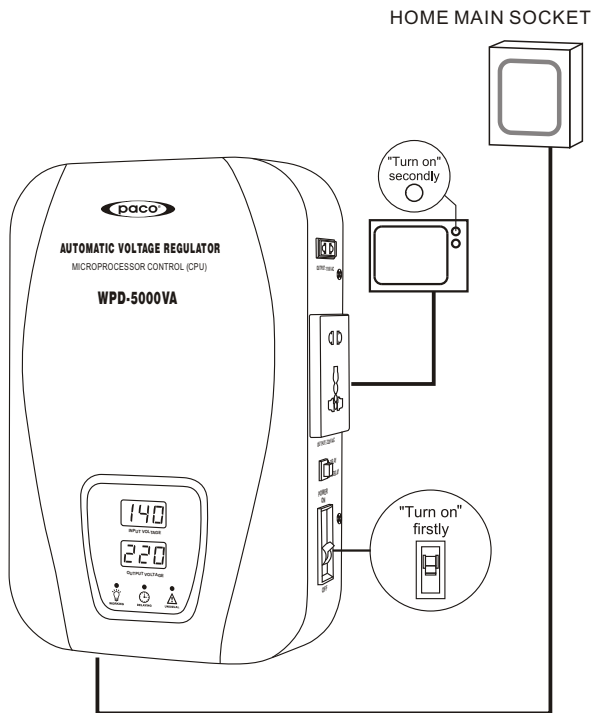

NOTE: DELAY only take effect when the system is restarted into normal.

7. LOW & HIGH VOLTAGE PROTECTION

- When output voltage is lower or higher than labeled voltage, AVR will turn into self-protection state automatically, the UNUSUAL RED indicator flashes every one second and output voltage will be cut off.
- When input voltage comply with labeled voltage, AVR will go into automatic recovering state, the UNUSUAL RED indicator extinguishes. Then DELAYING ORANGE indicator flashes every one second, the system goes into delaying state. After delay, DELAYING ORANGE indicator extinguishes and output voltage resume.

8. THERMAL PROTECTION

- When the temperature of the transformer exceeds $130^{\circ}\text{C} \pm 5\%$, the system will automatically turn into self-protection state, UNUSUAL RED indicator will flash every one second and output voltage shut down. While temperature is lower $70^{\circ}\text{C} \pm 5\%$, the system will recover automatically. UNUSUAL RED indicator will extinguish, and output resume.


9. OVERCURRENT PROTECTION

- When AVR is overcurrent, the system will turn into self-protection, RED led indicator will flash every one second and there is no output. To resume the output, you should lessen the load and then restart the unit.


NOTE: Indication for overcurrent features is not equipped in standard configuration. This function should be effective only after users notify manufacturer in advance.

10. OUTPUT CAPACITY

- The automatic voltage regulator will switch off automatically if the total wattage of the electrical appliances exceed the automatic voltage regulator output capacity.
- If this voltage is in the range of 190-250V, the regulator provides the 100% listed maximum output power. The maximum output power will change as the curve shown below.

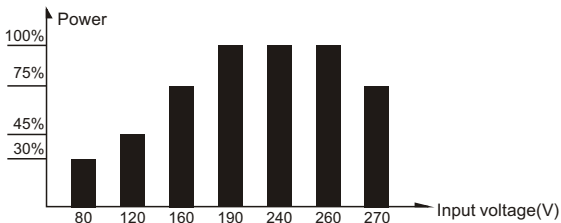

Loading capability diagram

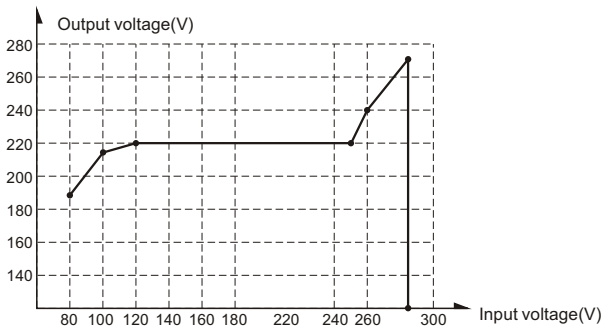


Input / output voltage diagram

11. GROUNDING CONNECTION

WARNING: BEFORE USING THIS AUTOMATIC VOLTAGE REGULATOR YOU MUST PROVIDE A GROUND CONNECTION TO THE AUTOMATIC VOLTAGE REGULATOR.

- On the rear panel of the automatic voltage regulator is a terminal fitted with a nut. This terminal is connected to the case of the automatic voltage regulator and also to the earth terminal of the AC output socket. The use of this terminal will depend on your particular installation. In any installation, heavy duty, green-insulated wire should be used for this connection.

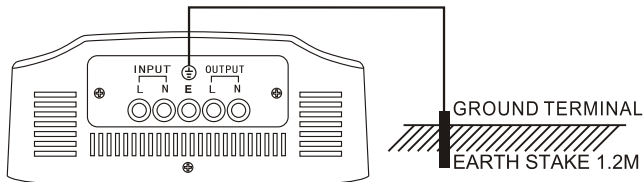

In a stationary land based installation, the earth terminal should be connected to a metal earthing stake driven into the ground to a depth of 1.2m or more.

NOTE: The earth terminal of the AC outlet is connected to the neutral terminal.

This is the same as a standard household powerpoint where the neutral line is bonded to earth and there is normally no voltage between them.

12.CAUTION

- In case of trouble with the AC output, e.g. short-circuit, overload, etc... the protection circuit will automatically cut off the output.
In such cases:
 - switch off the power at once
 - disconnect all units
 - check the connected devices
 - use the unit again unless the problems concerning the connected devices have been solved
- When in use for a prolonged period of time, the AC output may suddenly be cut off although the input voltage is normal. This may be caused by excessive temperatures. If this happens, please proceed as follows:
 - Switch off the automatic voltage regulator at once
 - Disconnect some of the appliances or wait until the automatic voltage regulator cools off
 - Switch the automatic voltage regulator back on

- Always keep the automatic voltage regulator in an environment which is:
 - (A) Well-ventilated
 - (B) Not exposed to direct sunlight or any other heat source
 - (C) Inaccessible to children
 - (D) Safe from water/moisture, oil or grease
 - (E) Safe from any flammable substance

WARNING: DO NOT DISASSEMBLE THE UNIT. HAZARDOUS VOLTAGE! DANGER!
PLEASE RETURN TO THE DEALER IF YOU FIND ANY PROBLEM WITH THE UNIT


13. MAINTENANCE

- Very little maintenance is required to keep your automatic voltage regulator operating properly.
- You should clean the exterior of the unit periodically with a damp cloth to prevent accumulation of dust and dirt. At the same time, tighten the screws on the AC input terminals.

14. EXPERT OF PROTECTOR FOR

- Make sure that the total power does not exceed the listed maximum output power of the regulator.
Be sure to connect the ground point to the ground for your Safety.

Expert of Protector For:

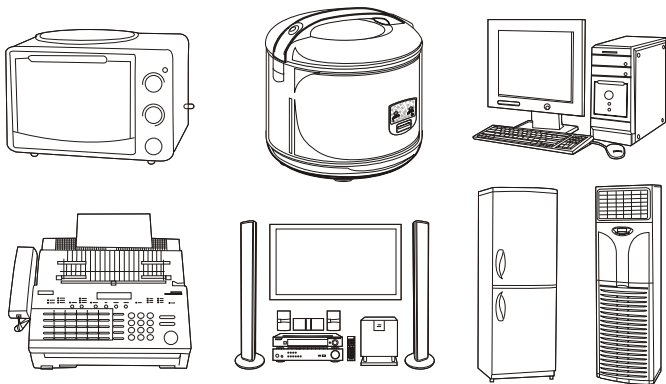

15. SPECIFICATION

P/No.	WPD-2000VA	WPD-3000VA	WPD-5000VA
Output Power	2000VA	3000VA	5000VA
Technology	CPU based Digital Circuit		
Input Voltage	☐ 100-260V~	☐ 120-260V~	☐ 140-260V~ ☐ 80-140V~
Input Frequency	50/60Hz		
Output Voltage	☐ 220V~	☐ 230V~	☐ 240V~ ☐ 110V~
Output Precision	+/-10%		
Efficiency	98%		
Delay Time	6 secs / 180 secs		
Phase Single	Single Phase		
High Voltage Protection	Yes		
Low Voltage Protection	Yes		
Circuit Protection	Air switch		
Thermal Protection	Yes		
High Output Voltage Protection	255V~		
LED Digital Display Status	Input Voltage / Output Voltage		
Circuit breaker	15A	16A	25A
Ambient temperature	-20°C to +50°C, output power is reduced automatically at high temperatures		
Operating Temperature	0~40°C		
Storage Temperature	-15°C~45°C		
Operating Relative Humidity	10%RH~102%RH		
Dimension (L×W×H)	300 x200 x75mm	365 x243 x98mm	365 x243 x98mm
Weight	5.0kg	8.1kg	9.1kg

* Specification are subjected to change without prior notice.

CAUTION

- Avoid overloading
Do not use the regulator beyond its maximum power.
- When connected to any appliance with built-in motor compressor, the starting power is generally several times of the appliance's listed power rating. Make sure that the total starting power capacity of all connected appliance does not exceed the listed maximum output power of the regulator. For color TV, calculate it twice as its listed capacity.
- Make sure that the regulator is of the same output voltage and frequency as the appliance's it connected.
- Make sure that the voltage of electrical source is within the listed range of the input voltage of the regulator.
- Always place the regulator in an environment that is:
 - (A) Well ventilated.
 - (B) Not exposed to direct sunlight or heat source.
 - (C) Out of reach from children.
 - (D) Away from water moisture oil or grease.
 - (E) Away from any flammable substance.

